

How to install Roller Blinds.

Roller blinds are available in multiple designs, with varying styles and finishes. As Bolton Blinds offer a made-to-measure service, it shouldn't be necessary to trim yours down, making this a simple and easy blind to hang.

WHAT YOU NEED

- Your blind, carefully unpacked
- Screwdriver
- Pencil
- Appropriate screws and fittings
- A drill, though not needed in all cases
- A metal tape measure
- A sturdy step-ladder

TOP OR FACE FIX?

With a roller blind, you can decide whether you'd like the blind brackets fitting to the ceiling, or top of the window recess (top fix), or onto a wall or window frame (face fix). Though wood screws are provided with your blind, if you're looking to install your brackets onto any other kind of surface, you'll need to make sure you have the appropriate fittings. These are readily available at any good DIY store.

WHAT TO DO

FITTING A ROLLER BLIND WITH A SIDE CONTROL CHAIN

1 Fixing the brackets

Firstly, take stock of which side your control end is going to go. Hold your brackets to the wall, mark when they need to go in relation to where the blind will hang and screw them in, making sure that none of the blind's fabric will be touching any part of the window when it's rolled up.

2 Fitting the blind

Simply fit the spring plunger into the bracket, pushing the chain-free end into place first. Then manoeuvre the control end of the blind into the other bracket, and allow for it to drop down to that it locks into place.

3 Make it safe

With the chain operated blinds, you will be supplied with two child safety 'easy break' chain connectors. These must be fitted, as they are designed to protect children by breaking apart when weight is applied. Simply clip the loose end of the chain into the corrector to reinstate the loop.

Please, also read the safety information as per the Safety swing tag attached to your blind.

QUESTIONS?



If you have questions about your fitting, why not give us a call and speak to one of our friendly Blindtex Customer Service on 01204 655 000 alternatively 0161 442 6644

1 Fit the brackets


Fit your brackets in the same way as explained above, making sure to use the right fittings for the surface type.

2 Fitting the blind


Firstly, make sure the blind fabric is entirely rolled onto the roller! Then, fit the spring plunger end into the right hand bracket. Push the blind into the bracket, and move the left hand end so it fits into the other bracket, ensuring that the center location spigot is sat on the very lowest slot in the bracket.

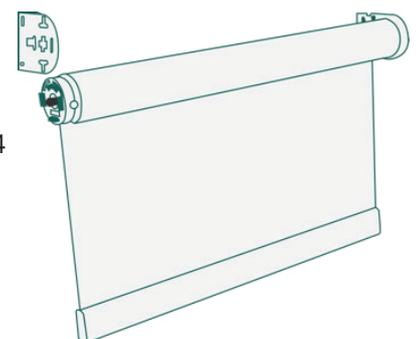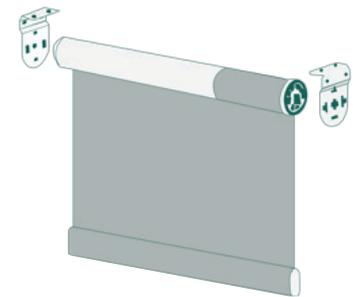

ROLLER Cassette System 32 - Chain

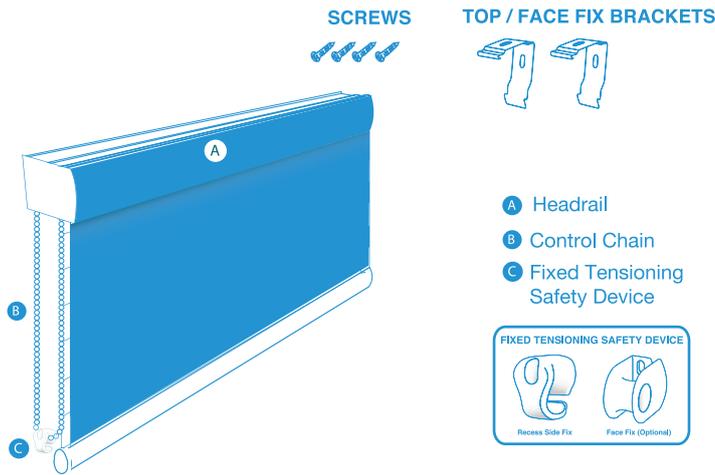


Fitting The Blind

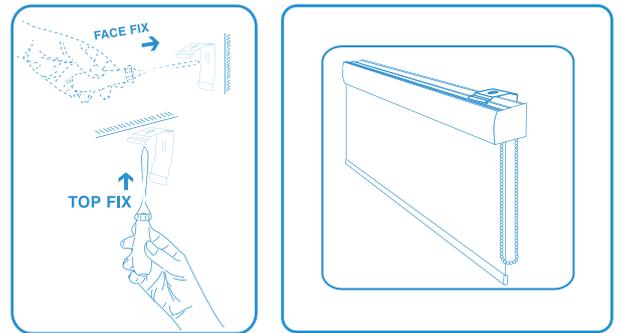

1. Install brackets firmly into place, use raw plugs where necessary to ensure brackets are securely fitted.
2. Hook the front ridge of the headrail into the front of the top clip. See Fig.2
3. Push the cassette up until the back ridge slides in and clips to the back of the top clip.
4. The headrail should snap into place.
5. Repeat until all brackets have been secured onto the rail
6. Install the Fixed Tensioning Safety Device at least 1500mm (1.5m) from the floor to ensure the blind is fitted as per the new child safety legislation. (See Child Safety Section)

Preparation:

1. Confirm the location of the brackets on the window. Options are: Top fix or face fix as shown in the image.
2. Fix the first two brackets 100mm from either end of the window frame or wall and spread the remainder of the brackets supplied evenly across the width of the window.

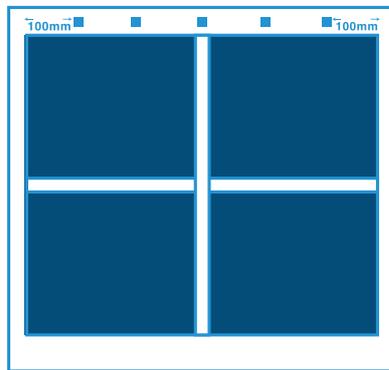

Please ensure any objects like handles are taken into account when installing the brackets.

Fitting the cassette

After fixing the brackets into place, hook the front ridge of the headrail into the front of the top clip, then push the cassette up until the back ridge slides in and clips to the back of the top clip.

3 Lock the blind into place

Once both ends of the blind are in their brackets, release the locking pin. Your blind should now be in place! If you find that the fabric does not wind up completely, you can pull it down 250mm from the uppermost position, and lock off. Next, remove the blind from the brackets and roll the material, by hand, back into the roller. Reattach the blind to the bracket, and release the locking pin. Check the tension, and your blind should be good to use!

ROLLER BLIND BRACKET COVER

- Enhance the finished look of your roller blind by fitting our new bracket covers
- Supplied with all roller blinds
- Suitable for face or top fixing, simply slide over the brackets once fitted
- NOT suitable for side fixing.
- Ideal for blinds fitting outside the window recess to walls, doors or conservatories.
- Can be used for recess fitted blinds. Fix brackets 2mm in from the side of the recess and use the oval fixing holes to make adjustments.
- The cover does not affect the operation of your blind and is for aesthetic purposes only, use optional.